

 *Aliaxis*



**VM DN 80÷100**  
PVC-U

Diaphragm valve

# VM DN 80÷100


The VM is particularly suitable for isolating and regulating abrasive or dirty fluids.

The handwheel control and diaphragm seal provide precise and effective control, while reducing the risk of water hammer to a minimum.

## DIAPHRAGM VALVE

- Connection system for solvent welding and for flanged joints
- **Optimised fluid dynamic design:** maximum output flow rate thanks to the optimised efficiency of the fluid dynamics that characterise the new internal geometry of the body
- Handwheel that stays at the same height during rotation, with internal bearing to minimise friction and operating torque
- Standard optical indicator
- **Internal operating components in metal** totally isolated from the conveyed fluid
- Bonnet fastening screws in STAINLESS steel protected against the external environment by PE plugs
- **New flanged bodies:** the new bodies, characterised by a monolithic flanged structure, are available in PVC-U, PVC-C, PP-H and PVDF. This design, free from body and flange joints, greatly reduces mechanical stress and increases system performance.

Technical specifications	
<b>Construction</b>	Single wear diaphragm valve
<b>Size range</b>	DN 80 ÷ 100
<b>Nominal pressure</b>	PN 10 with water at 20° C PN 6 with water at 20° C (PTFE version)
<b>Temperature range</b>	0 °C ÷ 60 °C
<b>Coupling standards</b>	<b>Solvent welding:</b> EN ISO 1452, EN ISO 15493, BS 4346-1, DIN 8063, NF T54-028, ASTM D 2467, JIS K 6743. Can be coupled to pipes according to EN ISO 1452, EN ISO 15493  <b>Flanging system:</b> ISO 7005-1, EN ISO 1452, EN ISO 15493, EN 558-1, DIN 2501, ANSI B16.5 Cl.150
<b>Reference standards</b>	<b>Construction criteria:</b> EN ISO 16138, EN ISO 1452, EN ISO 15493 <b>Test methods and requirements:</b> ISO 9393 <b>Installation criteria:</b> DVS 2204, DVS 2221, UNI 11242
<b>Valve material</b>	<b>Body:</b> PVC-U <b>Bonnet:</b> PP-GR <b>Handwheel:</b> PA-GR
<b>Diaphragm material</b>	EPDM, FPM, PTFE (on request NBR)
<b>Control options</b>	Manual control; pneumatic actuator

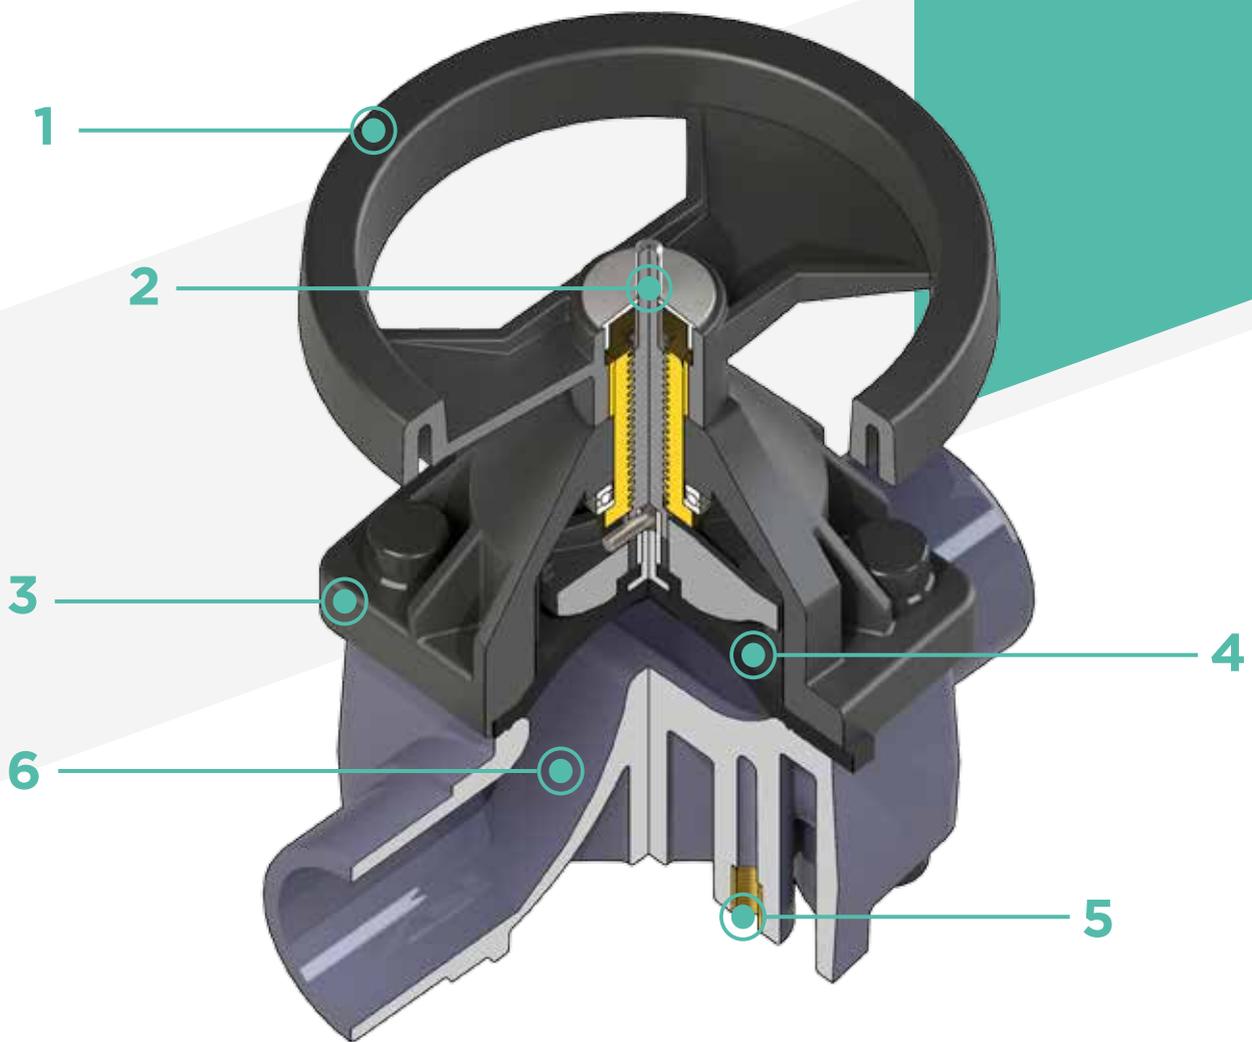

**1 Handwheel** in (PA-GR) with high mechanical strength and ergonomic **grip for optimum manageability**

**2 Metal optical position indicator** supplied as standard

**3 Full protection bonnet in PP-GR.** Internal circular and symmetrical diaphragm sealing area

**4 Diaphragm** available in EPDM, FPM, PTFE (NBR on request) and easy to replace


**5 Threaded metal inserts** for anchoring the valve

**6 New valve body internal design:** substantially higher flow coefficient resulting in lower pressure drops. Optimised adjustment curve for effective and precise flow rate regulation


# TECHNICAL DATA

## PRESSURE VARIATION ACCORDING TO TEMPERATURE

For water and non-hazardous fluids with regard to which the material is classified as CHEMICALLY RESISTANT. In other cases, a reduction of the nominal pressure PN is required (25 years with safety factor).

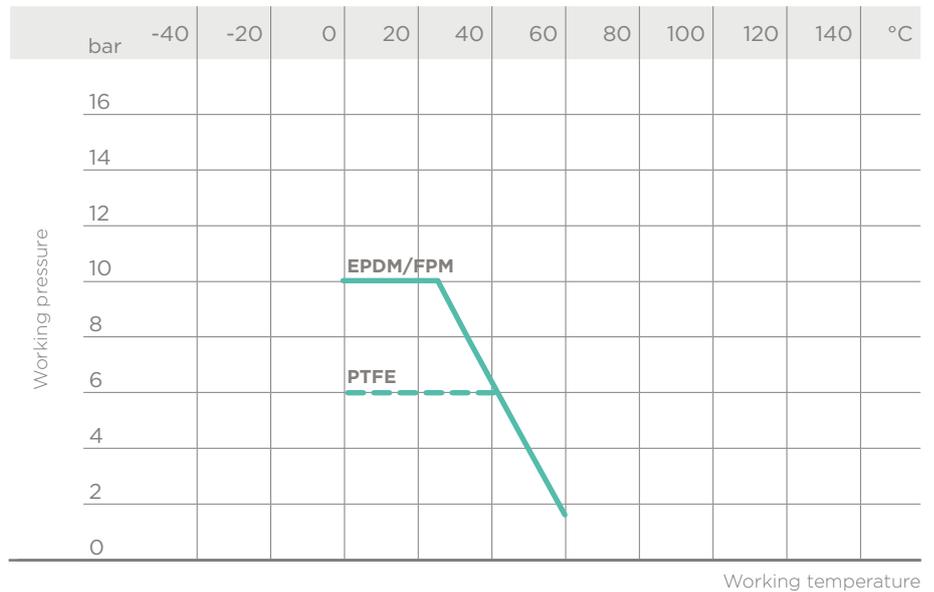

## PRESSURE DROP GRAPH

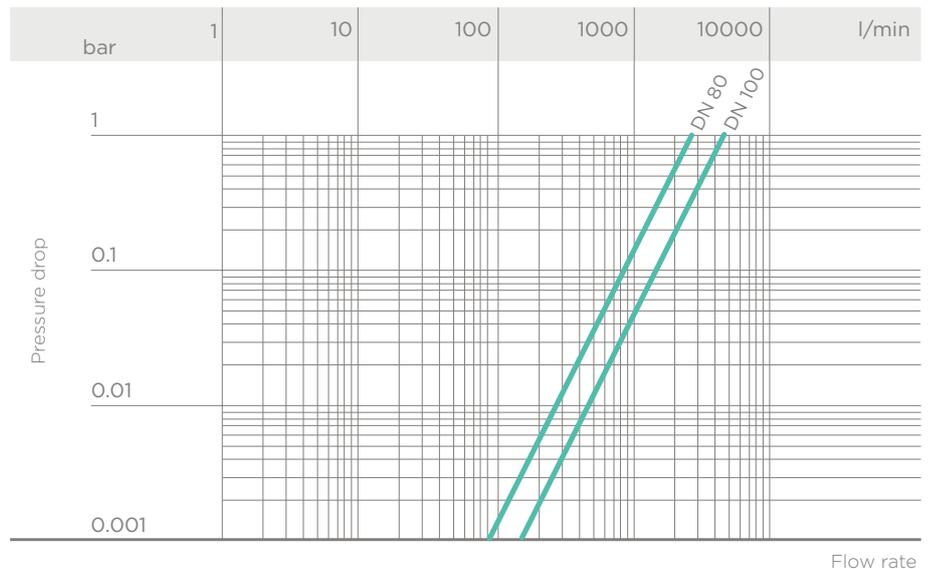

## K<sub>v</sub>100 FLOW COEFFICIENT


The K<sub>v</sub>100 flow coefficient is the Q flow of litres per minute of water at a temperature of 20°C that will generate Δp= 1 bar pressure drop at a certain valve position.

The K<sub>v</sub>100 values shown in the table are calculated with the valve completely open.

DN	80	100
K <sub>v</sub> 100 l/min	2910	4620

The information in this leaflet is provided in good faith. No liability will be accepted concerning technical data that is not directly covered by recognised international standards. FIP reserves the right to carry out any modification. Products must be installed and maintained by qualified personnel.

# DIMENSIONS

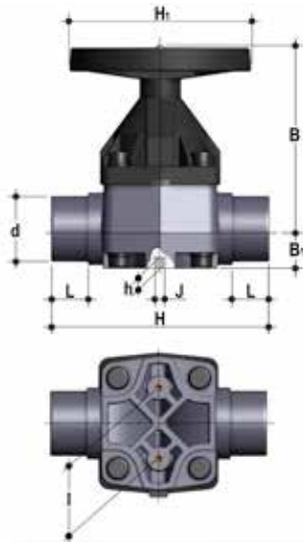


## VMDV

Diaphragm valve with male ends for solvent welding, metric series

d	DN	PN	B	B <sub>1</sub>	H	h	H <sub>1</sub>	I	J	L	g	Code EPDM	Code FPM	Code PTFE
90	80	*10	225	55	300	23	200	100	M12	51	7000	VMDV090E	VMDV090F	VMDV090P
110	100	*10	295	69	340	23	250	120	M12	61	10500	VMDV110E	VMDV110F	VMDV110P

\*PTFE PN6

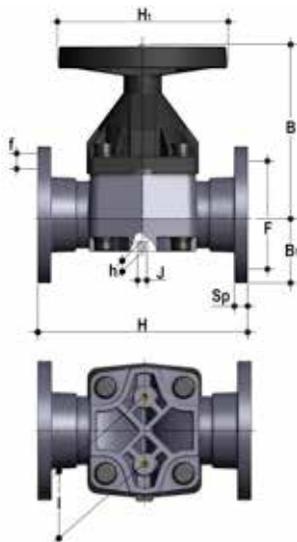


## VMOV

Diaphragm valve with flanged monolithic body, drilled PN10/16. Face to face according to EN 558-1

d	DN	PN	B	B <sub>1</sub>	F	f	H	H <sub>1</sub>	I	J	Sp	U	g	Code EPDM	Code FPM	Code PTFE
90	80	*10	225	55	160	18	310	200	100	M12	21.5	8	8500	VMOV090E	VMOV090F	VMOV090P
110	100	*10	295	69	180	18	350	250	120	M12	22.5	8	12400	VMOV110E	VMOV110F	VMOV110P

\*PTFE PN6

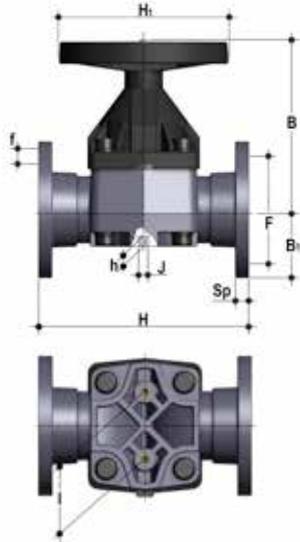

## VMOAV

Diaphragm valve with flanged monolithic body, drilled ANSI B16.5 cl. 150 #FF


d	PN	B	B <sub>1</sub>	F	f	H	H <sub>1</sub>	I	J	Sp	U	g	Code EPDM	Code FPM	Code PTFE
3"	*10	225	55	152.4	19.1	263	200	100	M12	21.5	4	8500	VMOAV300E	VMOAV300F	VMOAV300P
4"	*10	295	69	190.5	19.1	328	250	120	M12	22.5	8	12400	VMOAV400E	VMOAV400F	VMOAV400P

\*PTFE PN6

For spare parts related to installation prior to october 2017 please contact FIP Technical Support

# COMPONENTS

## EXPLODED VIEW DN 80÷100

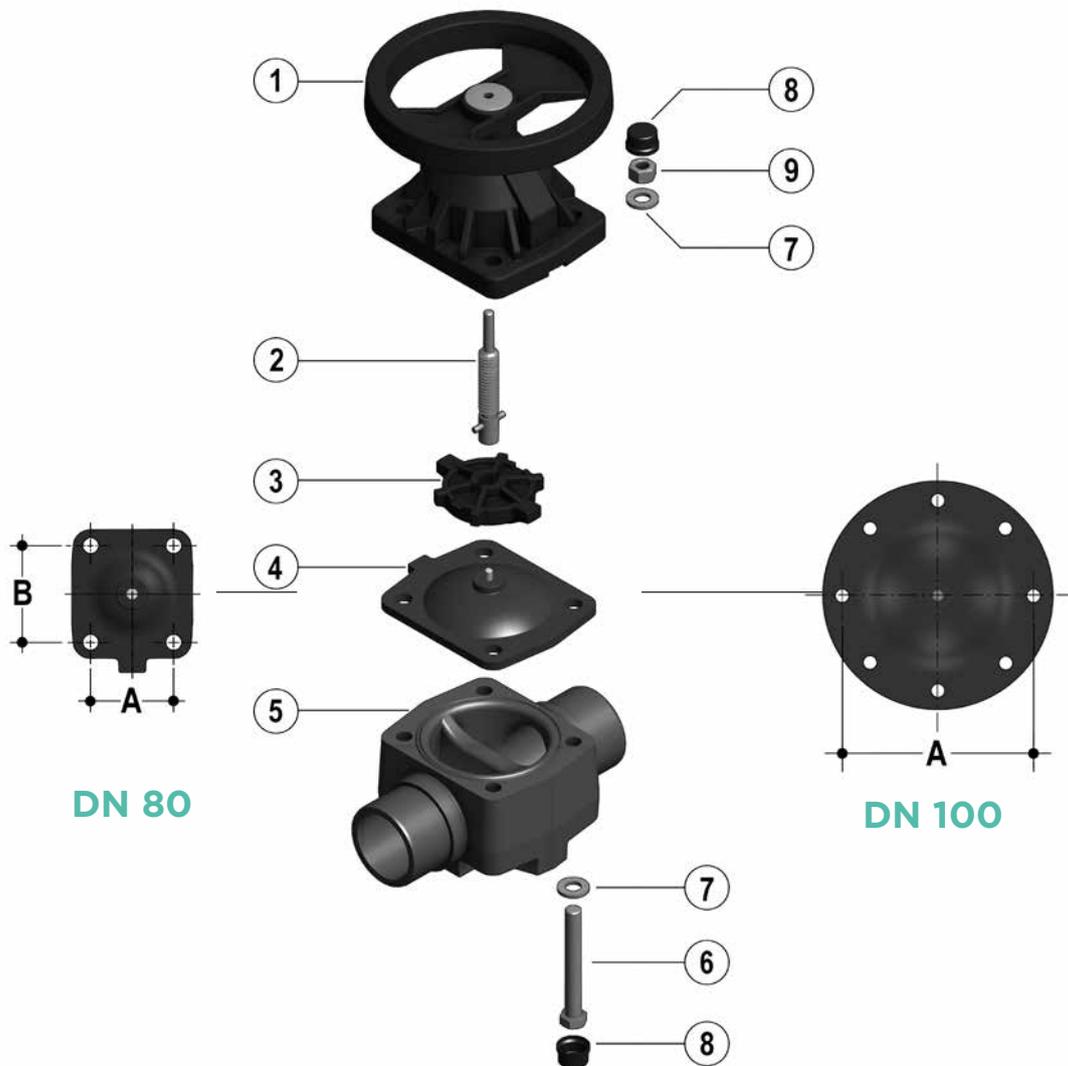

DN	80	100
A	114	193
B	127	-

**1** · Bonnet (PP-GR - 1);  
Handwheel (PA-GR - 1)

**2** · Indicator - stem  
(STAINLESS steel - 1)

**3** · Shutter (PBT - 1)

**4** · Diaphragm  
(EPDM, FPM, PTFE - 1)

**5** · Body (PVC-U - 1)

**6** · Hexagonal screw  
(Zinc plated steel - 4)

**7** · Washer (Zinc plated steel - 4)

**8** · Protection plug (PE - 4)

**9** · Nut (Zinc plated steel - 4)

The material of the component and the quantity supplied are indicated in brackets

## DISMOUNTING

The diaphragm constitutes the part of the valve more subject to mechanical and chemical stress from the fluid. Consequently, the condition of the diaphragm must be checked at regular intervals in accordance with the service conditions. To do this, it must be disconnected from the handwheel and from the valve body.

- 1) Cut-off fluid upstream from the valve and make sure it is de-pressurised (downstream drain if necessary).
- 2) Unscrew the four screws (6) and separate the body (5) from the internal components.
- 3) Unscrew the diaphragm (4) from the shutter (3). Rotate the handwheel clockwise to free the stem-shutter unit. Clean or replace the diaphragm, if necessary (4). If necessary, lubricate the stem (2).

## MOUNTING

- 1) Apply the shutter (3) to the stem (2), ensuring the stem pin is positioned correctly.
- 2) Screw the diaphragm (4) onto the stem (2), taking care not to stretch it.
- 3) Open the valve.
- 4) Place the bonnet-handwheel unit (1) on the body (5) and join the two components with bolts.
- 5) Press the protection plugs into place (8).

# INSTALLATION

The valve can be installed in any position and in any direction.

When starting up the plant, make sure that there are no leaks from between the diaphragm and the valve body. If necessary, tighten the fastening screws (6).



**Note:** during assembly operations, it is advisable to lubricate the threaded stem. Mineral oils are not recommended for this task as they react aggressively with EPDM rubber.

Moreover, as the diaphragm seal is compressed between the body and the actuator, the valve body stud-bolts and nuts must be checked and tightened, if necessary, prior to installation.